

Operation Manual

Android Mobile App



Connect TGate3 to any router as shown below.




Connect your smart phone to the above router using wifi password.

Note : Always smart phone app will work only when it is connected to the router above.



1 Type User name and password then touch **Proceed**.

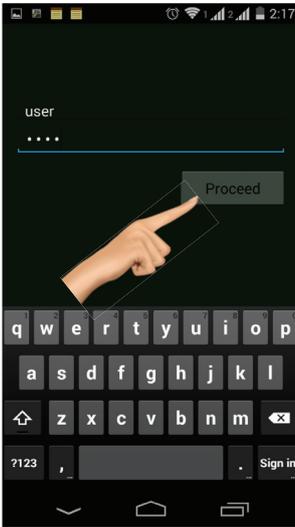

2 Touch **Control** to go to rooms.



3 Touch **Living** to go to switch control page.




4 Touch any button to toggle the lights **ON/OFF**.




5 Touch and hold **Light** icon for two seconds to edit the name and icon.



6 Type the light name as desired.

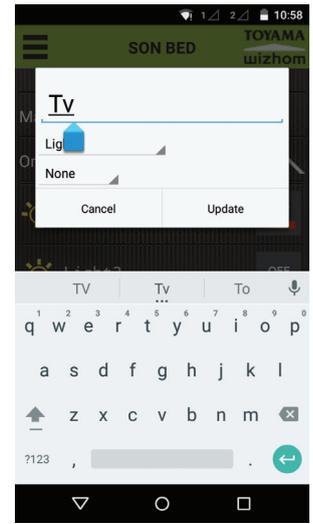


7 Select the icon as per the above text. Touch **Update**.

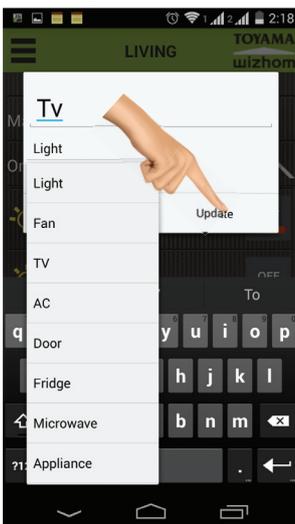

8 Touch **TV** icon to see the TV control page.



9 See the TV controle page below.

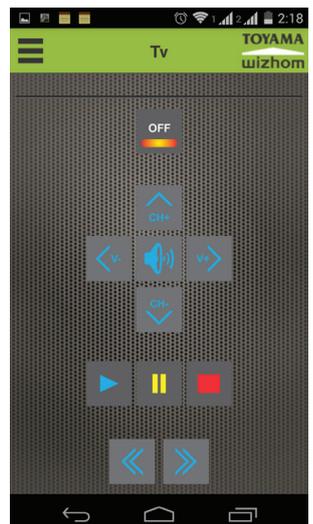

To edit room names,

- 1 Touch and hold **Living** for two seconds to edit room name.



- 2 Enter/edit room name touch **OK**.



- 3 See the edited room name below.




Scenes


- 1 Touch **Scenes** to go to scenes page.



- 2 Touch **Plus** icon to make new scenes.

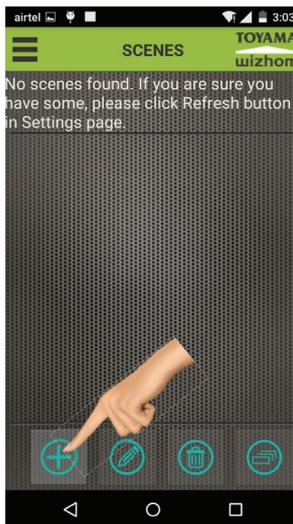

- 3 Enter desired scene name and touch **Proceed**.

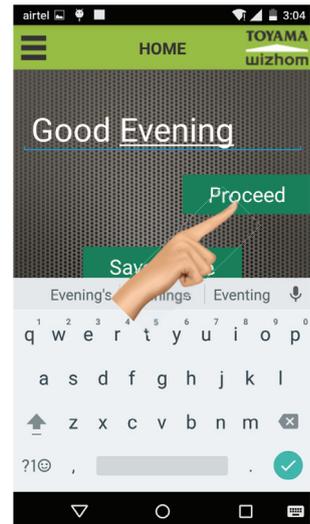

- 4 Room page will appear. select desired room for scene creation, Ex : Living



- 5 Touch **ON/OFF** button to select the light to include in scenes. The text changes from red to green. Scenes can be made out of only lights with green text.



- 6 In this scene light 1,2&3 an Fan 6 will be **ON** the rest 4&5 is not sele Touch **back** button to save the scene.



7 Touch on Save Scene to save.



8 Touch on Scene name to activate scene.



9 To Edit, Delete & schedules touch for 2 seconds on scene name.



Scenes Scheduling


1 Touch and hold scene text for two seconds to go to scheduling mode.



2 Touch **schedule** icon as shown below.



3 Set the desired time and select the days of the week. Touch **proceed** to save and go back to home page.

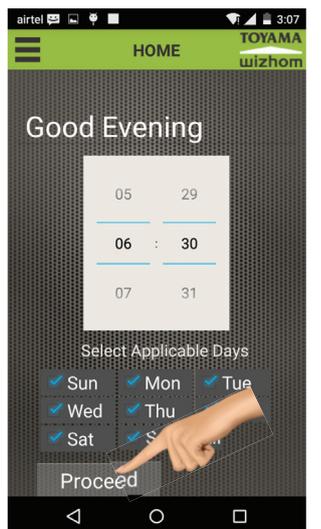


4 Touch **schedules** to view the list of schedules.



5 Touch and hold **Good morning** two seconds to activate edit and delete options.



6 Activated icons glow as shown below.

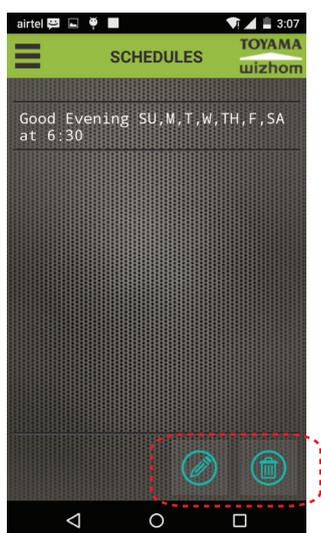

Security

7 Touch **security** to view sensors.



8 Sensor page.







9 **ARM** or **DISARM** selected sensors.



Climate & Media


To operate IR Devices with IR Blaster.

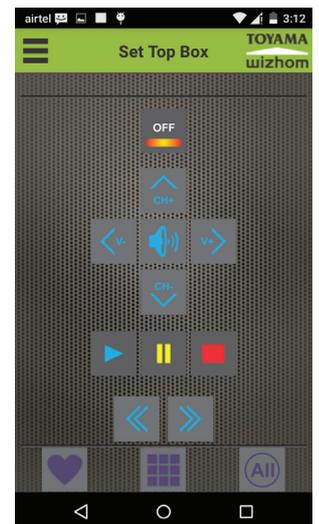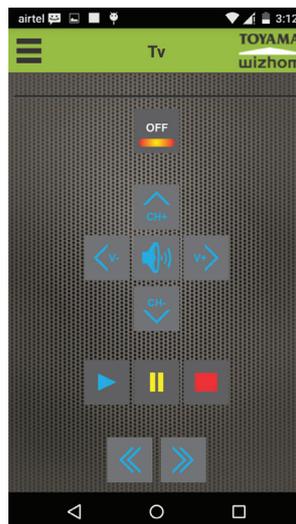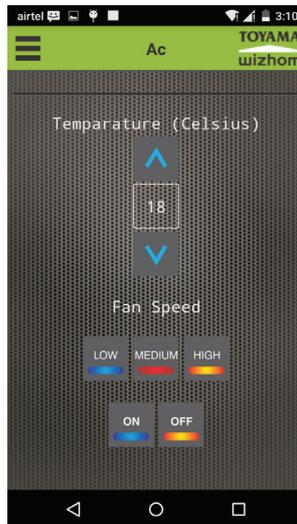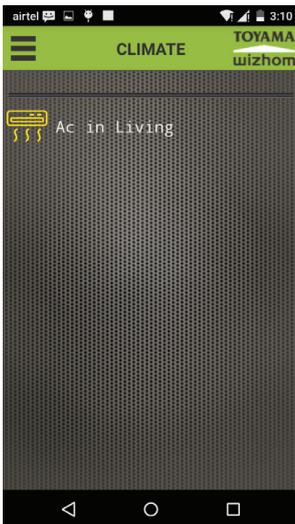


Remote Operation

- To operate switches from outdoor connect TGate3 to router with internet.
- To operate switch from outdoor through mobiles (ON mobile data connection)


Check Remote option as show in image

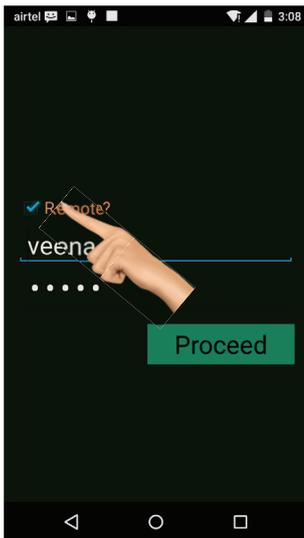

Click on Proceed button

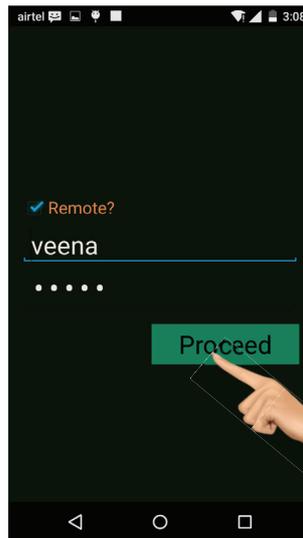

Page will load to login

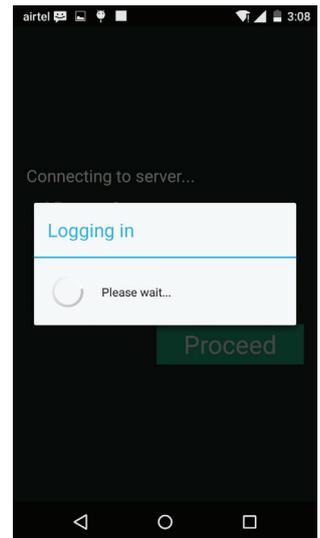

After login





for Technical support contact

Ph : 9379860801

Email: naseer@toyamaindia.com

TOYAMA CONTROLS & SYSTEMS (P) LTD.

Head Office :

38 (A2), KIADB Industrial Estate,
Hoskote, Bangalore 562114.

Fax : 080 27971749, Ph: 09342310810

Email : salse@toyamaindia.com

www.toyamaindia.com